 





FLEXIBLE CONNECTORS INSTALLATION RECOMMENDATIONS




VIBRATION

Install in a straight line with a rigid support on the fixed end.

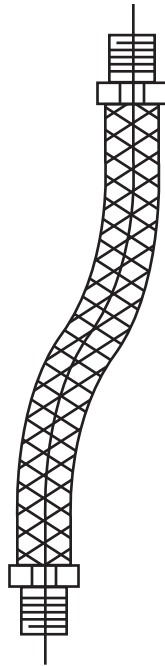

MISALIGNMENT

Allow sufficient length to make a gradual bend.

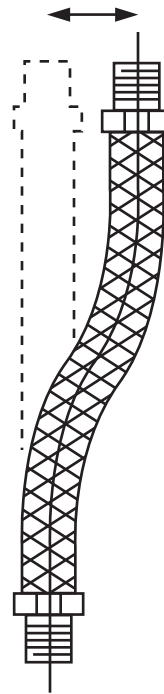

INTERMITTENT PIPE TRAVEL

Prevalent in heating systems where heating and cooling produces elongation and contraction. Refer to the product catalog for maximum allowable movement each side of center line. For more than the recommended maximum movement, offset on the opposite side of center line. Install at right angle to movement.